

Safety information and warnings – Wine cooler

(safety information and warnings within the meaning of Article 19 D)

REGULATION (EU) 2023/988 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 10 May 2023

on general product safety, amending Regulation (EU) No 1025/2012 of the European Parliament and of the Council and Directive (EU) 2020/1828 of the European Parliament and the Council, and repealing Directive 2001/95/EC of the European Parliament and of the Council and Council Directive 87/357/EEC

GUIDELINES CONCERNING THE SAFETY OF USE

To ensure safety and reduce the risk of injury or electric shock, follow all precautions listed below.

This appliance is intended for household use in- doors and similar applications such as:

- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- staff kitchen areas in shops, offices and other working environments;
- catering and similar non-retail applications.

The appliance must be handled by at least 2 people.

Make sure the plug is easily accessible to allow disconnection from the mains supply.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

The manufacturer reserves the right to introduce changes which do not affect the operation of the appliance.

The Manufacturer shall not be held liable for damage arising from the failure to observe the instructions contained in this manual.

Keep this manual for future reference, or to pass it over to the next user.

This appliance is not intended for use by persons (including children) with limited physical or mental capabilities and persons who lack experience or familiarity with the appliance.

Do not allow children to use the appliance. Do not allow them to play with the appliance. They must not climb inside the drawers and swing on the doors.

The appliance operates properly at the ambient temperature (see product fiche). Do not use it in the cellar, unheated summer cottage during autumn and winter.

When placing, moving, lifting the appliance, do not hold the door handles, do not pull the con- denser at the rear part of the refrigerator and do not touch the compressor unit.

Pull the plug out from the mains socket before each maintenance activity. Do not pull on the cord, but hold the body of the plug instead.

The “cracking” sound, which the appliance may emit is caused by the expansion and contraction of parts as a result of temperature variations.

For safety reasons do not repair the appliance yourself. Repairs carried out by persons who do not have the required qualifications may result in serious danger for the user of the appliance.

Make sure you do not damage the cooling system, by puncturing the refrigerant pipes in the evaporator or breaking the pipes. The refrigerant is flammable. If the refrigerant makes contact with the eyes, rinse them with clean water and call for medical assistance immediately.

Important! If the power cord is damaged, it should be replaced by the manufacturer or specialist repair centre or a qualified person in order to avoid danger.

When performing activities, such as cleaning, maintenance or moving, the appliance must be completely disconnected from power supply (by pulling the plug out from the socket)

This appliance can be used by children aged 8 years and older or by persons with physical, mental or sensory handicaps, or by those who are inexperienced or unfamiliar with the appliance, provided they are supervised or have been instructed how to safely use the appliance and are familiar with risks associated with the use of the appliance. Ensure that children do not play with the appliance. Cleaning and maintenance of the appliance should not be performed by children unless they are 8 years or older and are supervised by a competent person.

Do not clean the appliance with steam

Keep the appliance and its power cord away from children under 8 years old.

Do not immerse the power cord or plug in water.

Keep cord away from heated surfaces.

Do not allow the connection cord hanging over the edge of a table or counter.

Do not use any electrical appliances inside the chamber

Do not use any tools to speed up the defrosting process

Regularly clean the ventilation openings (in case of built-in appliances or those installed under the worktop)

This appliance is not designed to be controlled by electronic timers or other devices that cut off power directly or remotely.

In case of accidental spillage of liquids on electrical components, immediately unplug your appliance from the power supply.

Make sure that the power cord is not crushed or damaged during installation.

Disable the appliance before disposing of it. Unplug the appliance from the power supply and cut off the power cord. To prevent children or animals from being trapped in the appliance, remove the doors, hinges and locks.

Note: If the appliance does not have a freezer compartment (), it is not suitable for freezing foodstuffs.

Pursuant to Commission Regulation (EU) 2019/2019, the minimum availability period for spare parts necessary to repair the appliance is 7 or 10 years depending on the type and purpose of the spare part.

The list of spare parts and the ordering procedure are available on the websites of the manufacturer, importer or an authorized representative.